

# Smärtgard

## application instructions



### general use directions

Prior to application, floor should be stripped of previous finishes or deep scrubbed and thoroughly cleaned to remove dirt and debris. Rinse with water until no residue remains and allow floor to dry thoroughly.

Apply 2-3 light, even coats of Smärtgard floor finish. Do not apply by pouring directly onto the surface; use a plastic roller pan. Apply by synthetic fiber wax applicator or lambs wool applicator.

Allow at least 60-90 minutes between each coat, depending upon environmental conditions. Apply no more than 4 coats within 24 hours.

Note:

Heavy coats or inadequate drying time between coats may result in increased stickiness and dirt retention.

After 24 hours, 3-4 additional coats may be applied as desired. Always allow Smärtgard to cure 36-48 hours after application before burnishing.


Note:

Minimum application temperature is 500F.

Coverage is approximately 500-1000ft<sup>2</sup>/gallon.

Full hardness of the finish is achieved in 3-4 days.

If spray buffing/burnishing immediately, dilute Smärtgard with water @1:2.

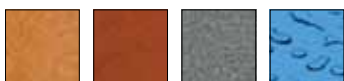

düraamen engineered products, inc.

116 West 23rd Street, 5th Floor, New York, NY 10011 | [duraamen.com](http://duraamen.com) | [info@duraamen.com](mailto:info@duraamen.com) | 1.866.835.6595